

Jillaroo
www.jillaroo.com.au

Awning Fabric Replacement Manual

 www.jillaroo.com.au
 1800-726-679
 sales@jillaroo.com.au

SCAN ME TO WATCH THE INSTALLATION VIDEO



HOW TO MEASURE AWNINGS & AWNING FABRIC

The size of an awning is measured from the centre of the right arm to the centre of the left arm. If you need a fabric REPLACEMENT , please DO NOT retrieve your measurements from your old awning fabric or the roller tube.

Our fabric will be approximately 10 inches (25.4 cm) shorter than the stated length. Example: If the awning size is 15FT, the fabric size will be around 14' 2".

PLEASE NOTE

To keep costs down, We manufacture the awning replacement fabric and fold the material to ship compactly.

Creases and wrinkles sometimes occur due to the folding of the fabric.

The creases and wrinkles are normal and should smooth out on their own after being set up.

Since the fabric is colored, a little colored material may peel off at the crease. This should be aesthetically minor and totally normal for this product.

PACKING LIST

| | | | |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
|  |  |  |  |
| Fabric | Poly cord | Pull strap | Pressing plate |

AWNING FABRIC REPLACEMENT MANUAL

!!Always relieve the tension of the awnings spring before you begin your fabric replacement.

Once the tension is released, carefully remove the spring and the old fabric from the awning.

New awning fabric installation steps:



1 Push the poly cord through the 2 vinyl loops (one at top and one 200mm from the bottom).




2 Slide the fabric into caravan sail track.



3 Slide the roller onto the vinyl (The sewn loop is the fixing groove in roller furtherest from caravan).



4 Pushing the vinyl firmly around the roller and press the fabric into the second groove (closest groove to the caravan on roller) using the pressing plate .

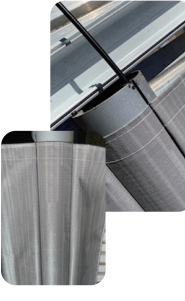

5 From the end of the roller insert the last cord pushing in from the end till it is fed in the whole length of the awning .



6 Insert spring end back into the roller .



7 Retention springs and connect to arms as per manufacturers requirements .



8 Close the awning, check you installed the fabric in the suitable position .



9 Fix the fabric on the lock rail with screws .

If you need any technical support services, please do not hesitate to contact us.